



# Kubo 57337

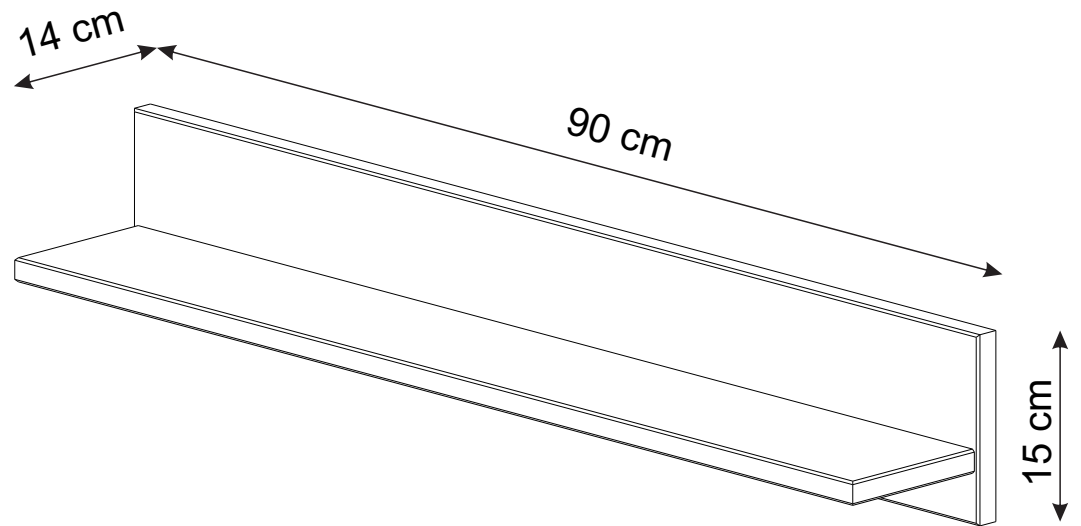


- |           |                                             |           |                                         |
|-----------|---------------------------------------------|-----------|-----------------------------------------|
| <b>D</b>  | <b>Montageanleitung</b><br>57337            | <b>GB</b> | <b>Assembly instructions</b><br>57337   |
| <b>FR</b> | <b>Notice de montage</b><br>57337           | <b>IT</b> | <b>Istruzioni di montaggio</b><br>57337 |
| <b>NL</b> | <b>Handleiding voor de montage</b><br>57337 | <b>PL</b> | <b>Instrukcja montażu</b><br>57337      |
| <b>CZ</b> | <b>Montážní návod</b><br>57337              | <b>SK</b> | <b>Návod na montáž</b><br>57337         |
| <b>HU</b> | <b>Szerelési útmutató</b><br>57337          | <b>RO</b> | <b>Instrucțiuni de montaj</b><br>57337  |
| <b>TR</b> | <b>Montaj talimatı</b><br>57337             | <b>RU</b> | <b>Инструкция по монтажу</b><br>57337   |

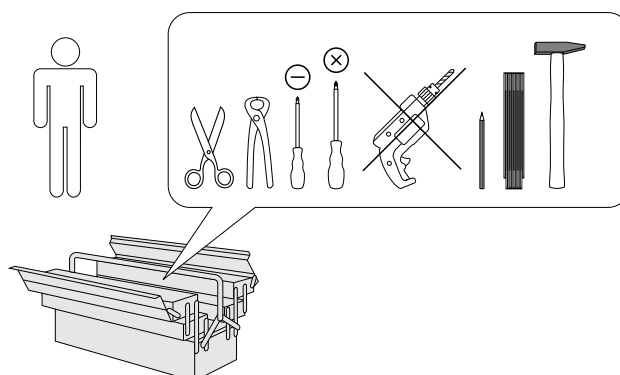




0  
10  
20  
30  
40  
50  
60  
70  
80  
90  
100  
110  
120  
130  
140  
150  
160  
170  
180  
190  
200

**Service • Dienstverlening • Serwis • Servis • Сервисная служба**



Name • Naam • Nazwa • isim • Название	
Nr. • No. • Номер	
Typ • Type • Тип • Тип	

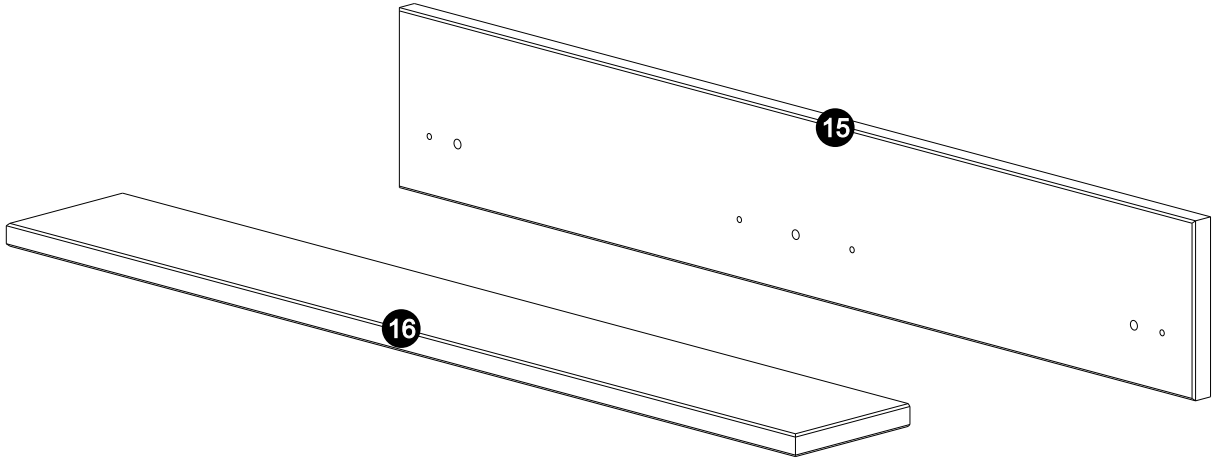


- |                            |                            |                            |                    |                              |
|----------------------------|----------------------------|----------------------------|--------------------|------------------------------|
| <b>A</b><br><br>4x40<br>4x | <b>B</b><br><br>3x16<br>4x | <b>C</b><br><br>8x30<br>3x | <b>D</b><br><br>2x | <b>E</b><br><br>4,5x60<br>2x |
|----------------------------|----------------------------|----------------------------|--------------------|------------------------------|

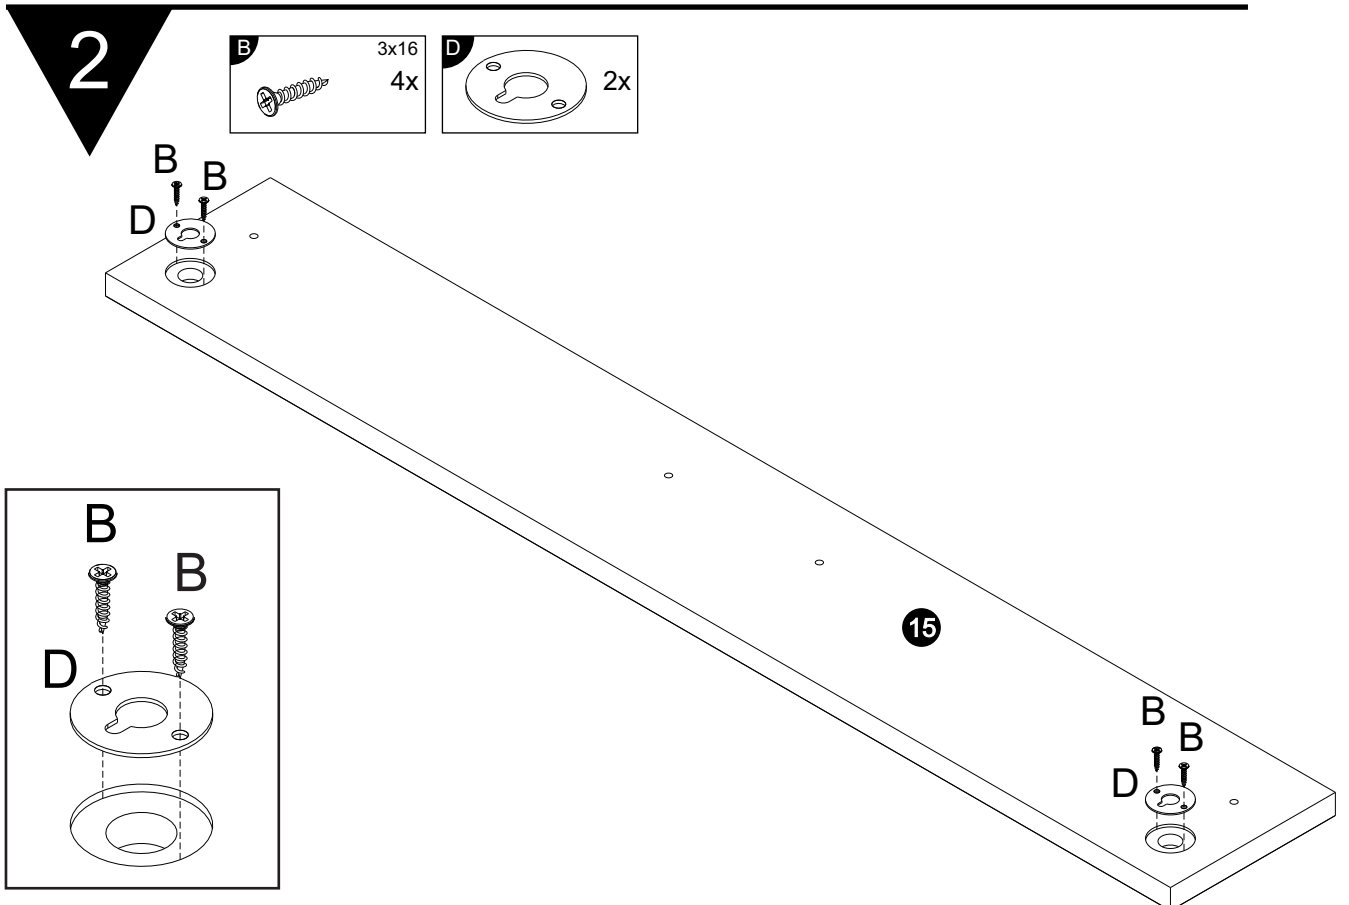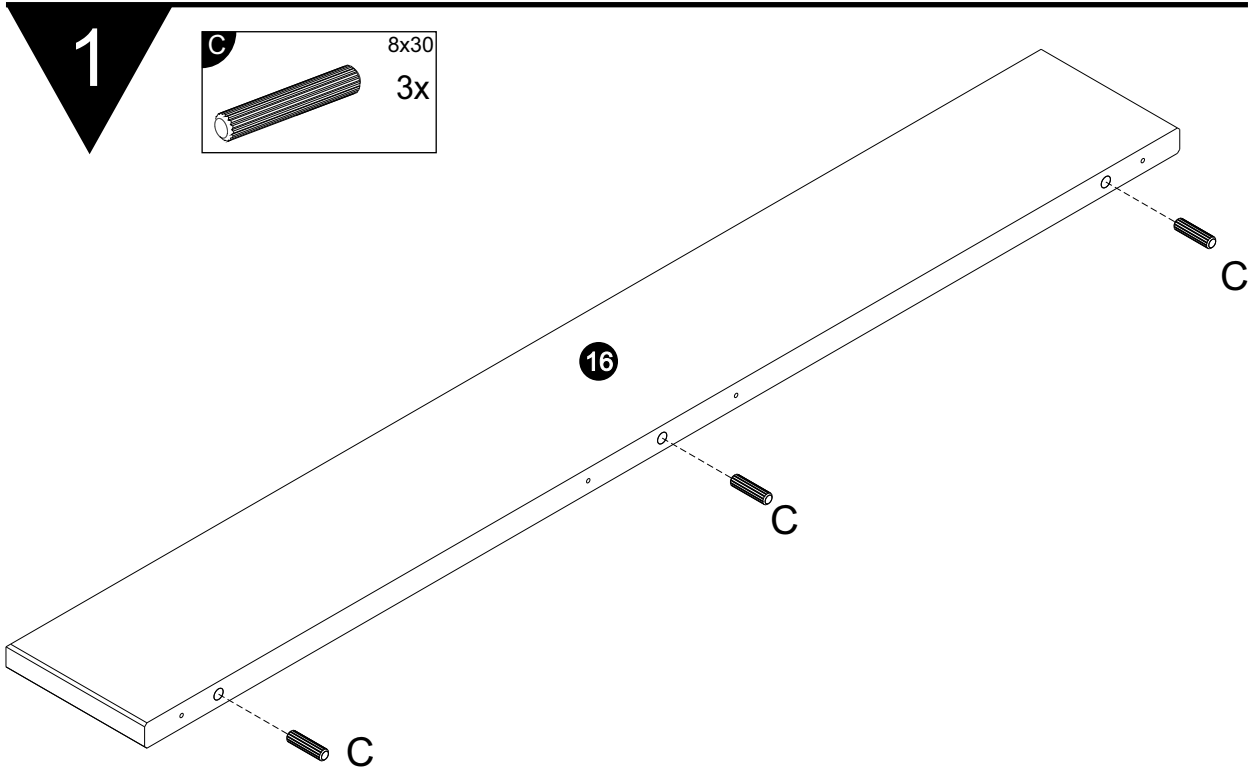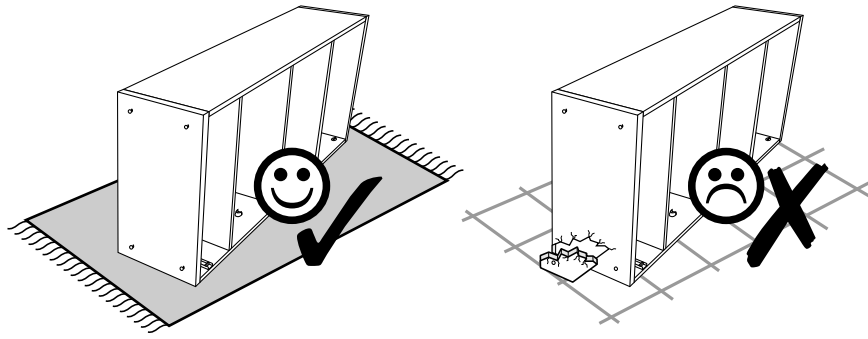

3

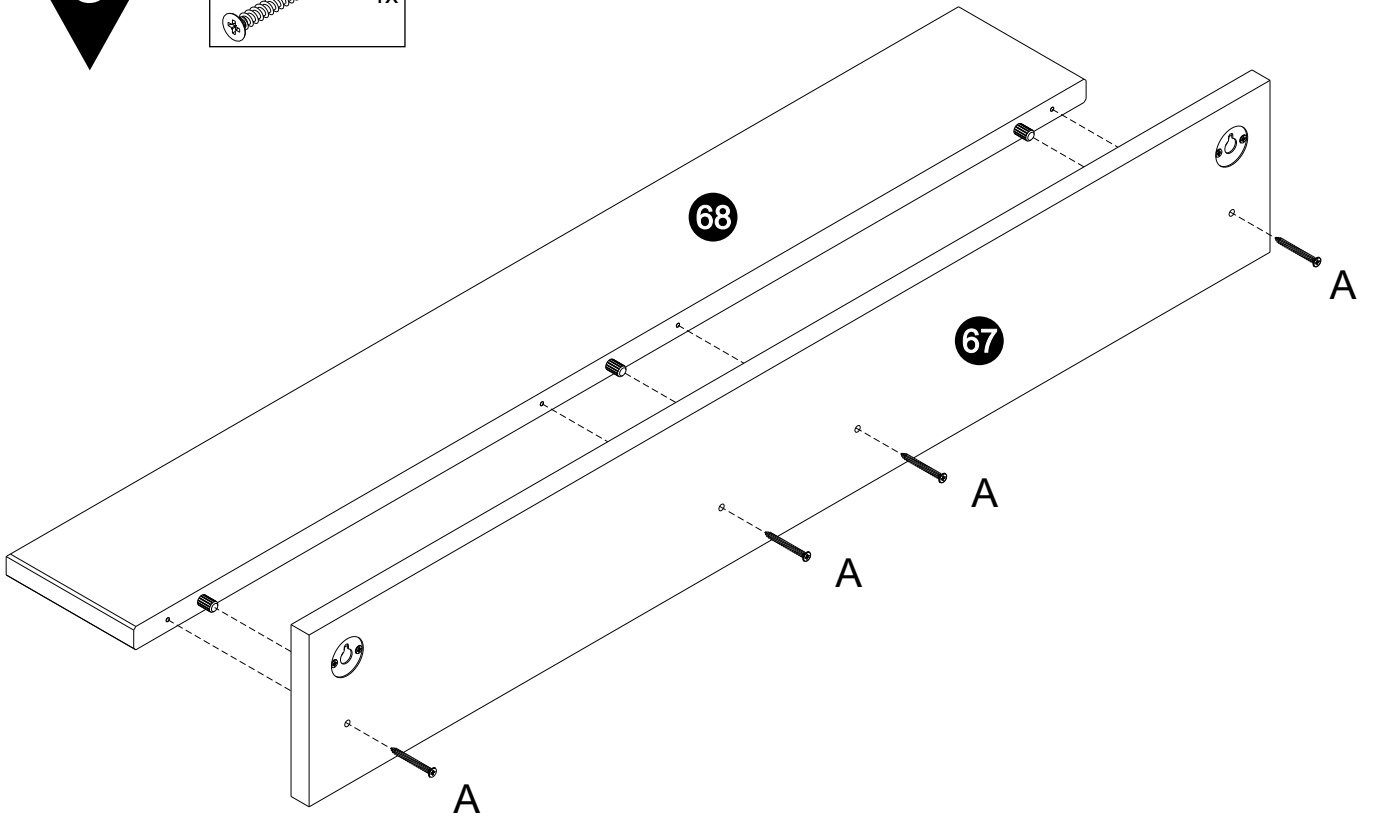

4



! Achtung • Attention • Opgelet • Uwaga • Dikkat • Внимание !	
(D)	Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	For certain wall types, a special dowel may be necessary!
(NL)	Bij enkele muurtypes is een speciale plug misschien vereist!
(PL)	Do niektórych rodzajów ścian konieczne mogą być specjalne wkręty!
(TR)	Bazı duvar tiplerinde bunun için özel bir dübel gerekli olabilir!
(RU)	Для некоторых типов стен может потребоваться специальный дюбель!
(FR)	Assurez vous de la nature de votre mur et utilisez les chevilles adaptées. Ne pas hésiter à emmener la vis deux pour obtenir les chevilles de.

