




MONTAGEANLEITUNG ASSEMBLY INSTRUCTION

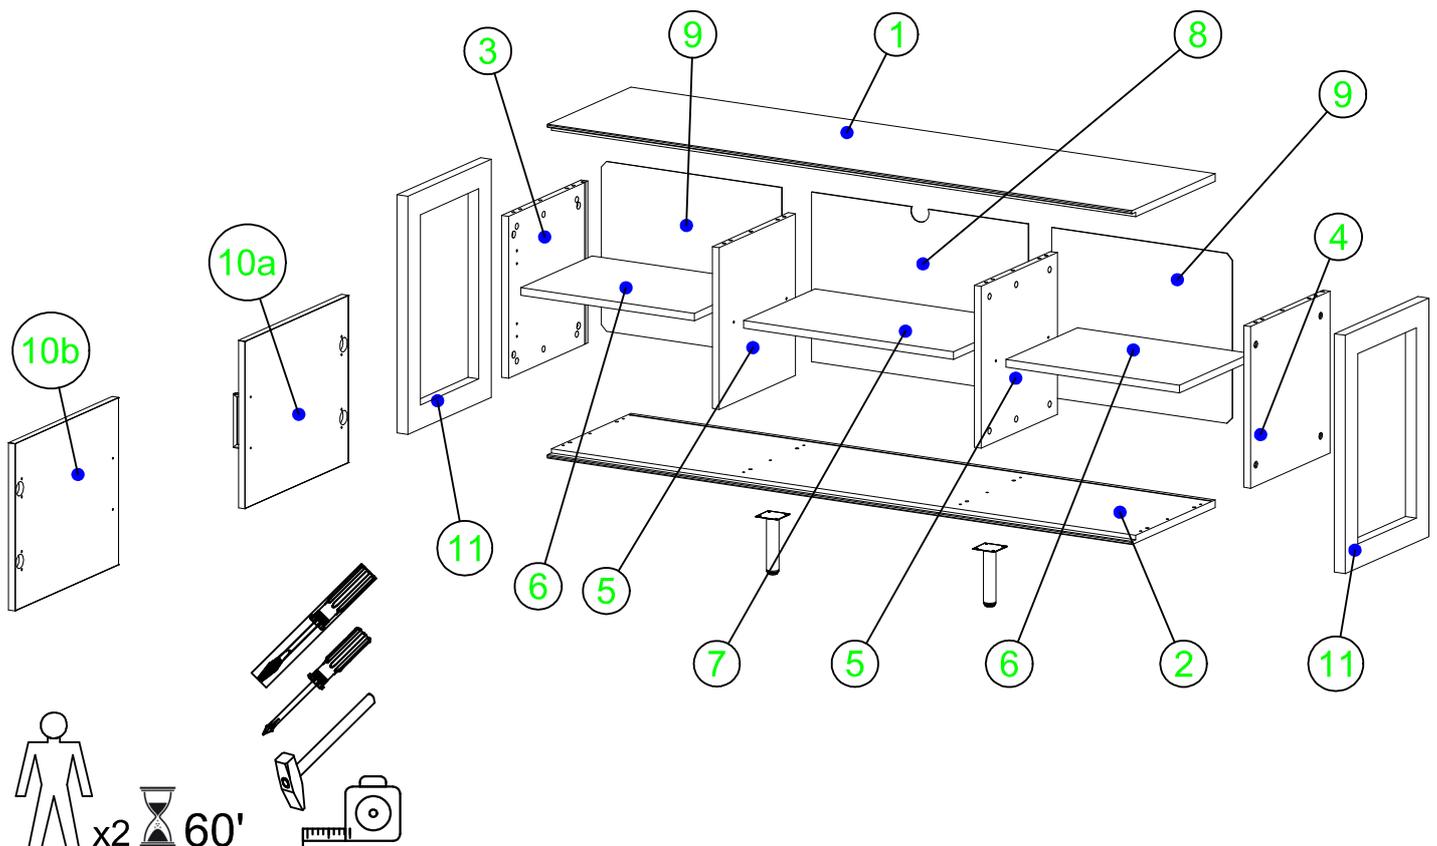




TV-KOMMODE MONTANA 2277






A Ø 8x30 16	B 24	D 24		E Ø 6.3x13 4	F 4	H 6	I 12	J Ø 5x13 16
	M 2	N 2		P/Q 16 6	R M4x25 4	S W8x30 8		U 2

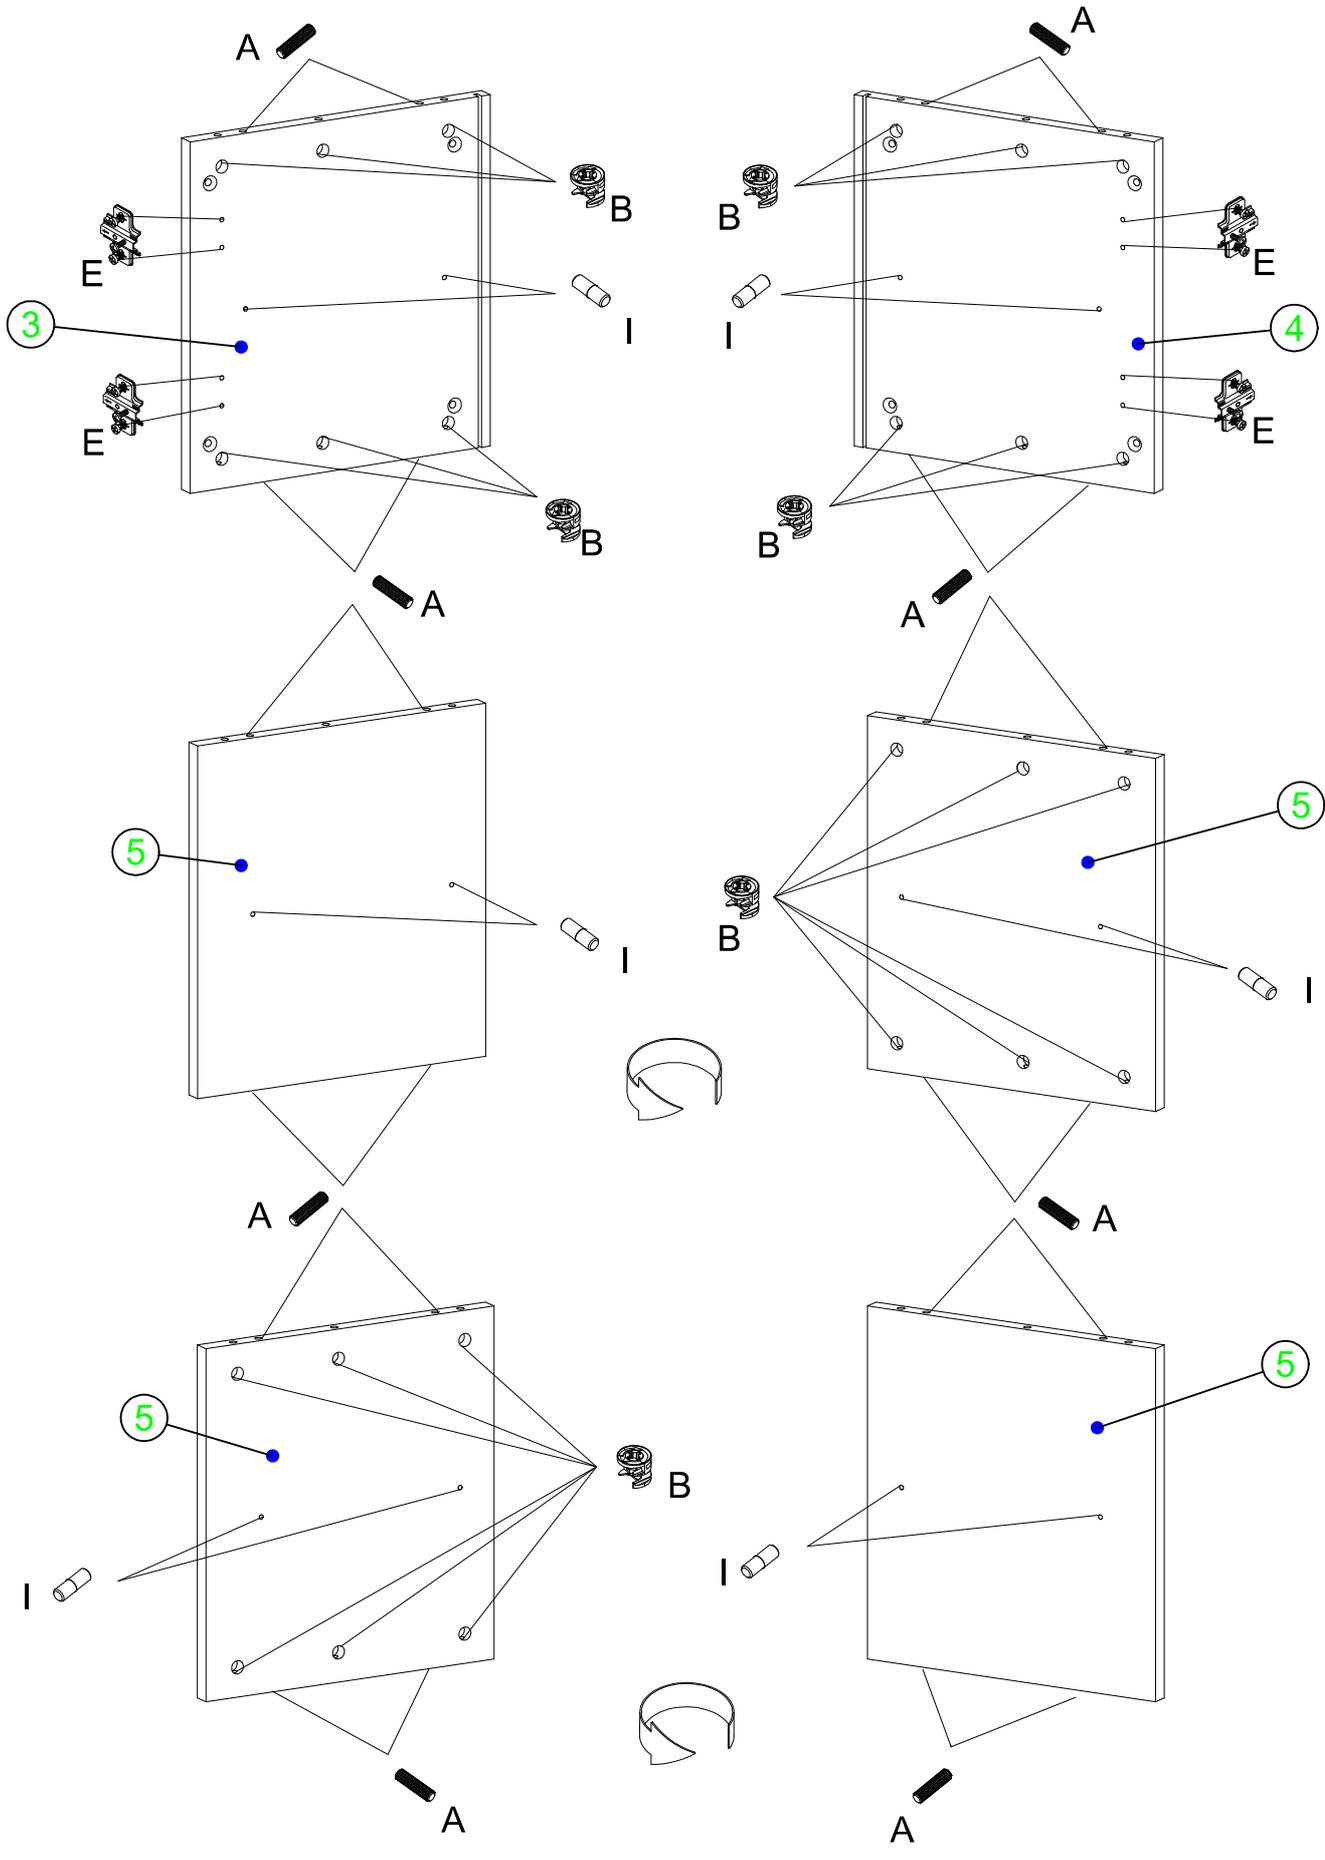

<p>A</p> <p>Ø 8x30 16</p>	<p>D</p> <p>24</p>	<p>E</p> <p>Ø 6.3x13 4</p>	<p>I1</p> <p>12</p>
--------------------------------------	---------------------------	---------------------------------------	----------------------------

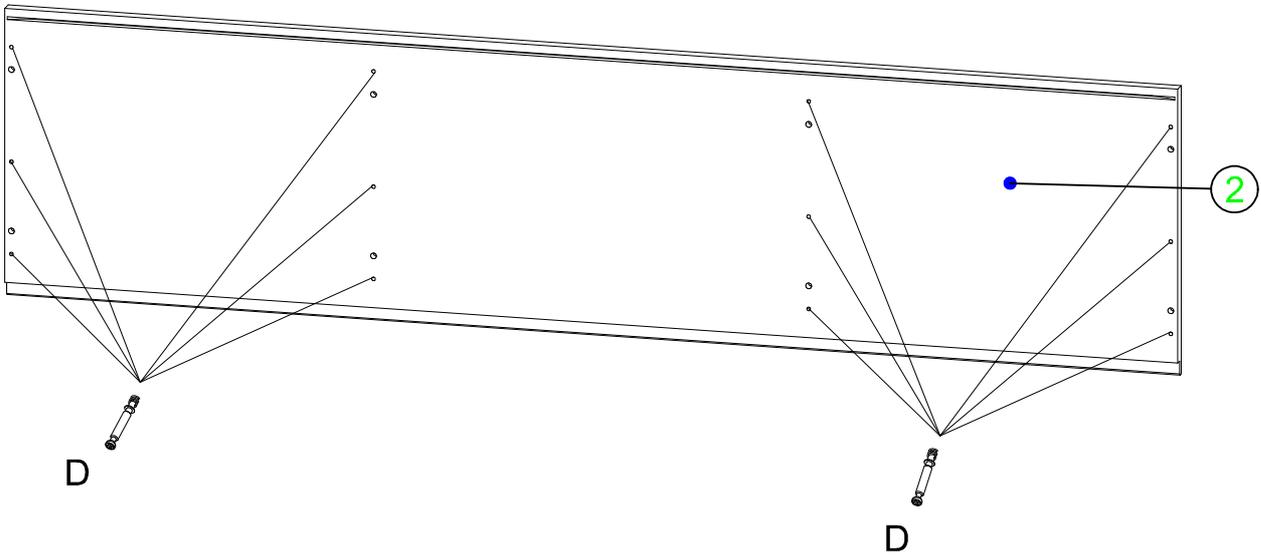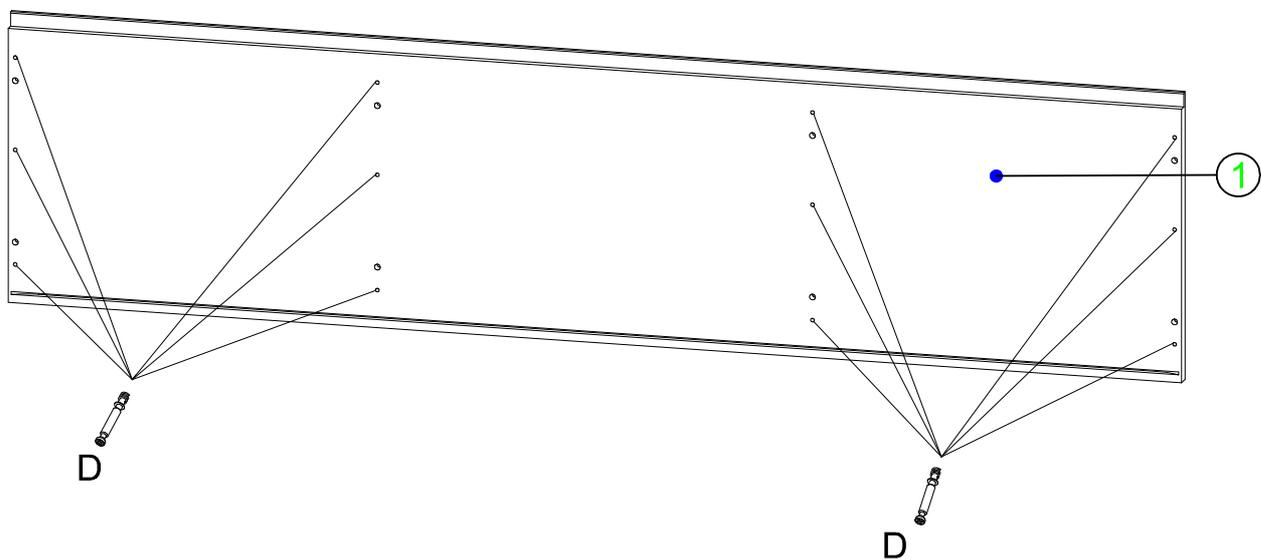

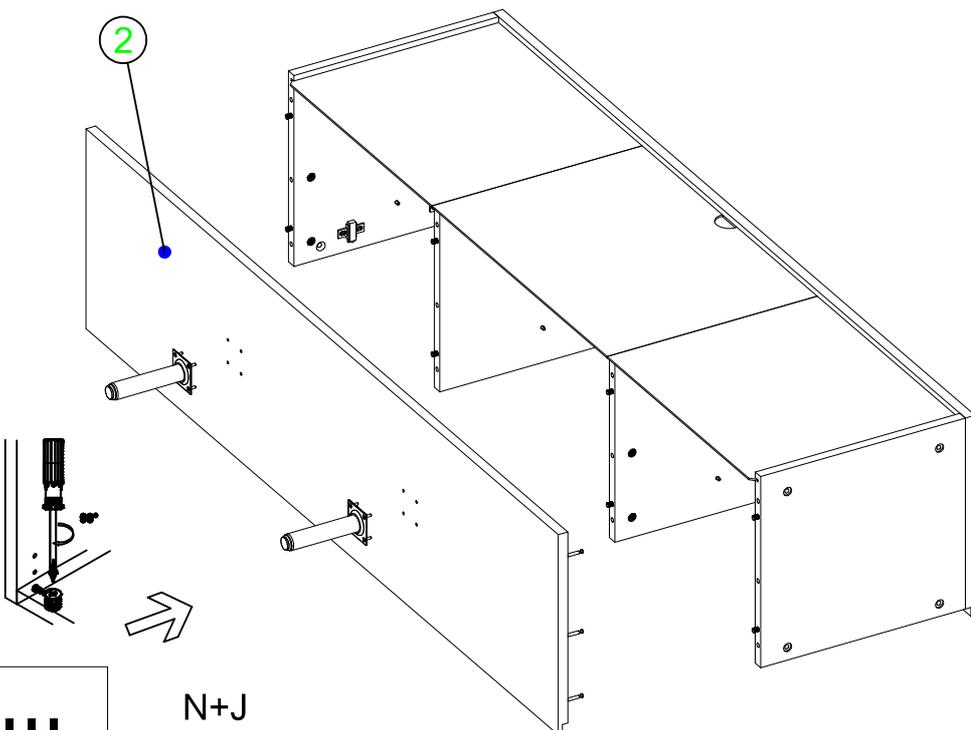
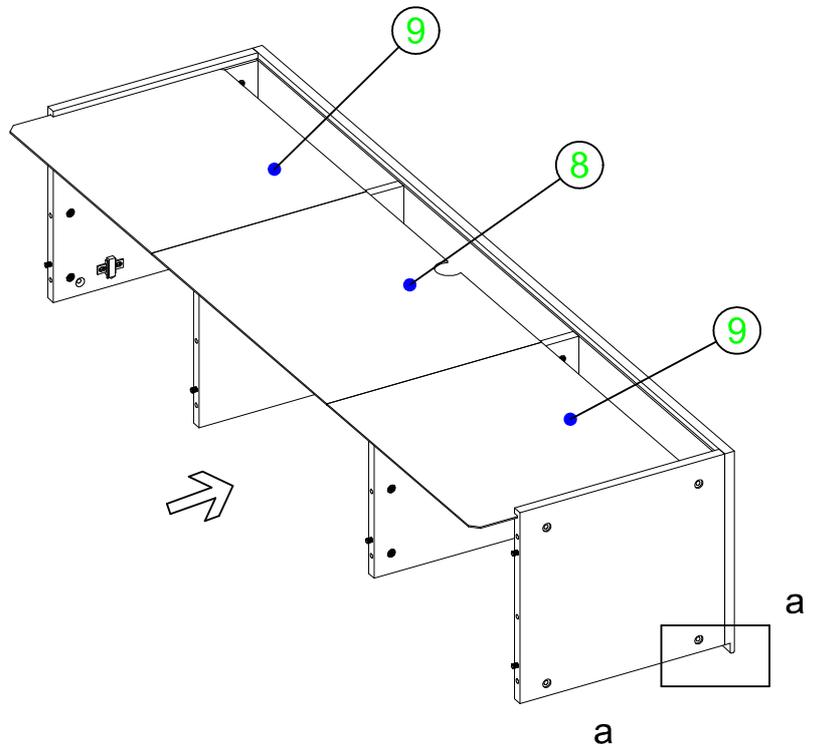
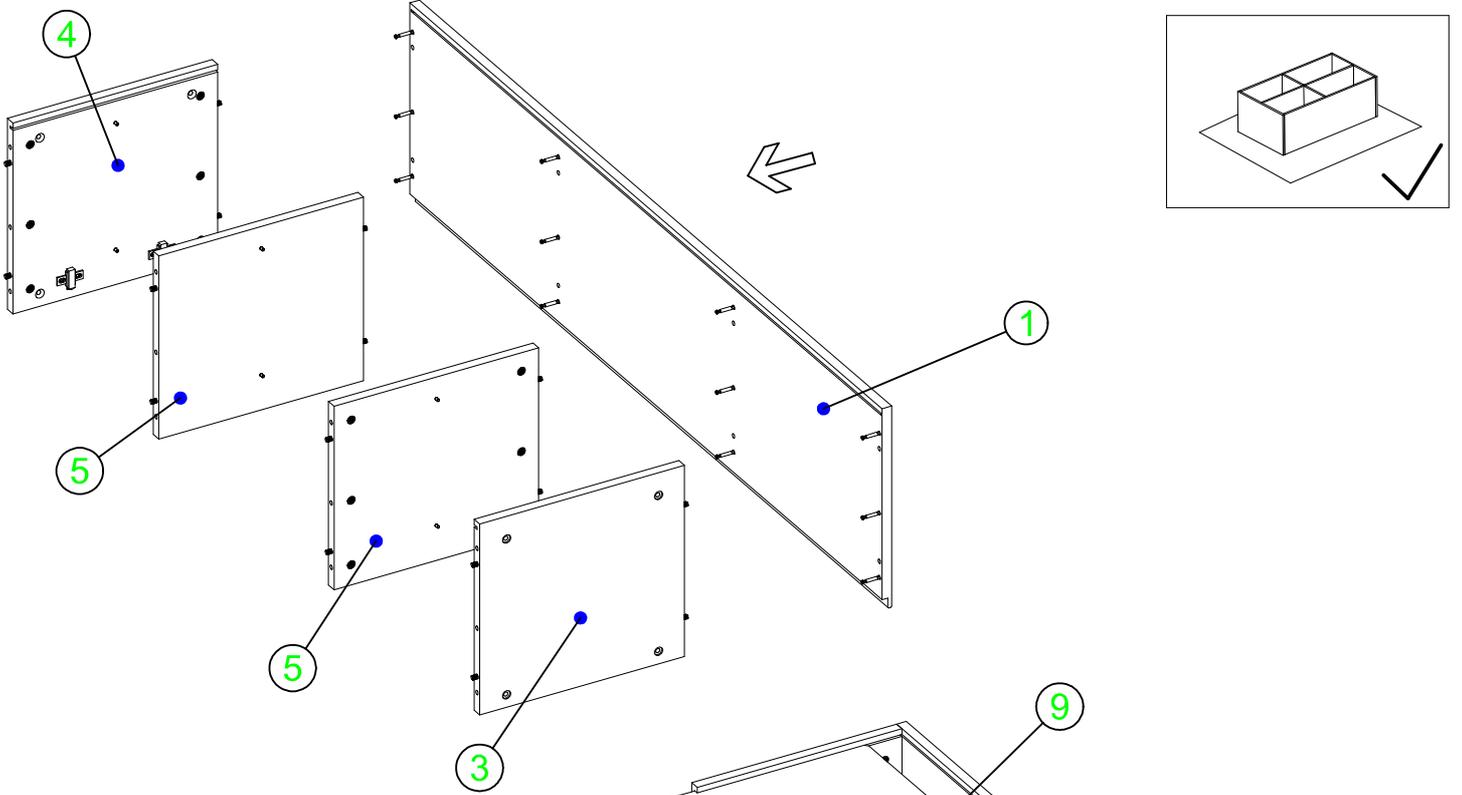


Achtung! Bewegen Sie die Möbel nicht auf dem Boden.




N+J

N	J
	
2	Ø 5x13 8

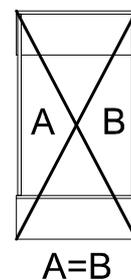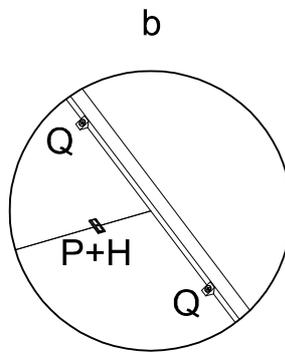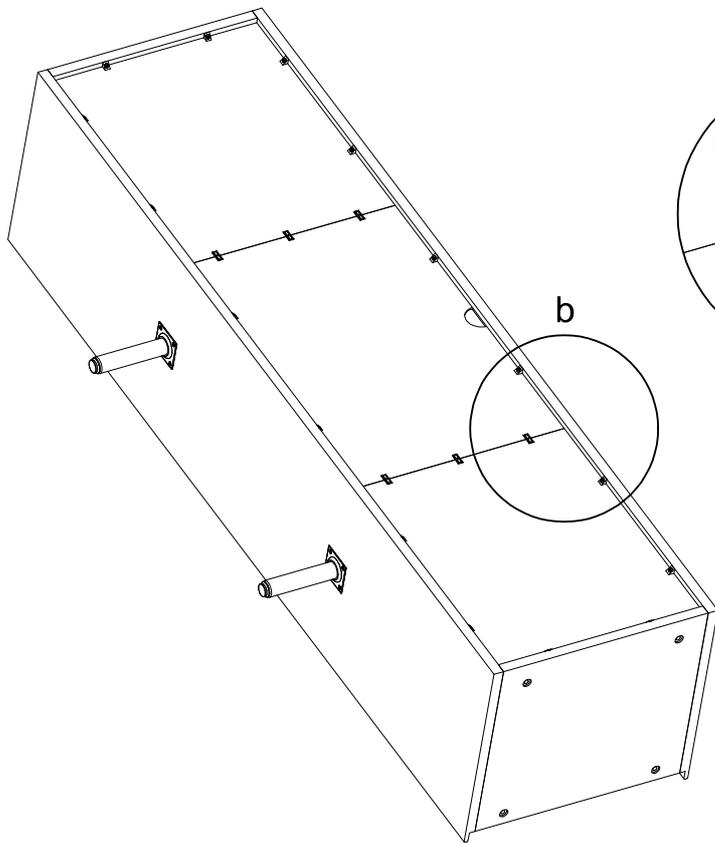





IV

H	P	Q
6	6	16

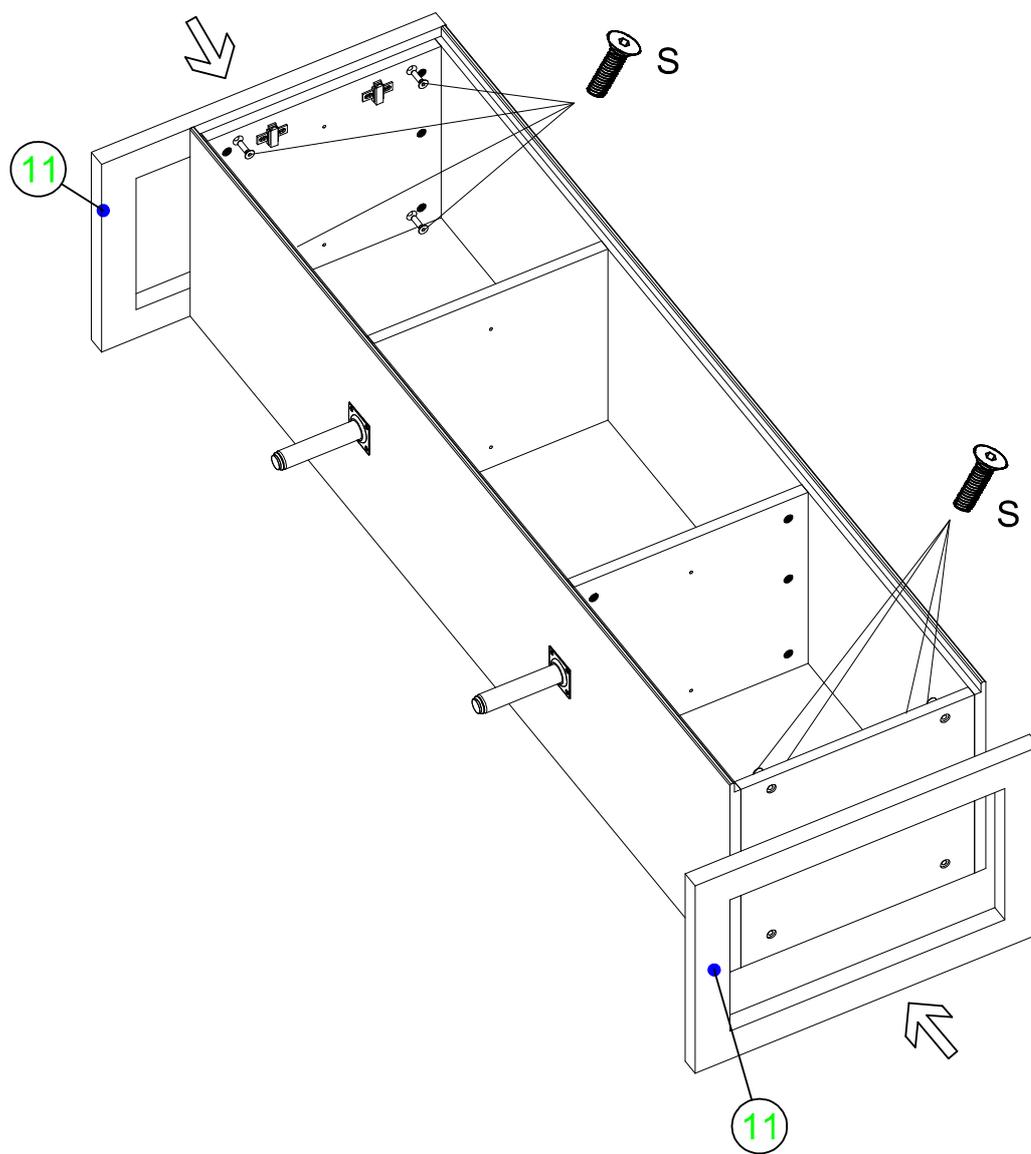


V

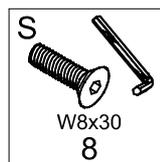

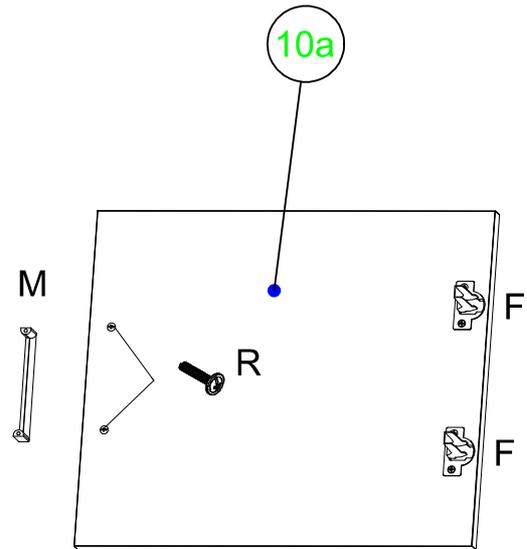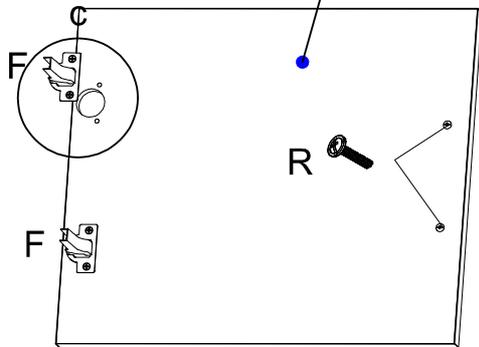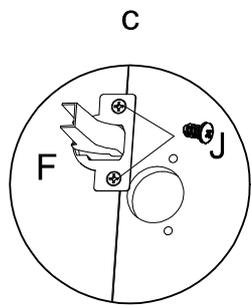

VI

 4	 \varnothing 5x13 8	 2	 M4x25 4
--	---	---	--

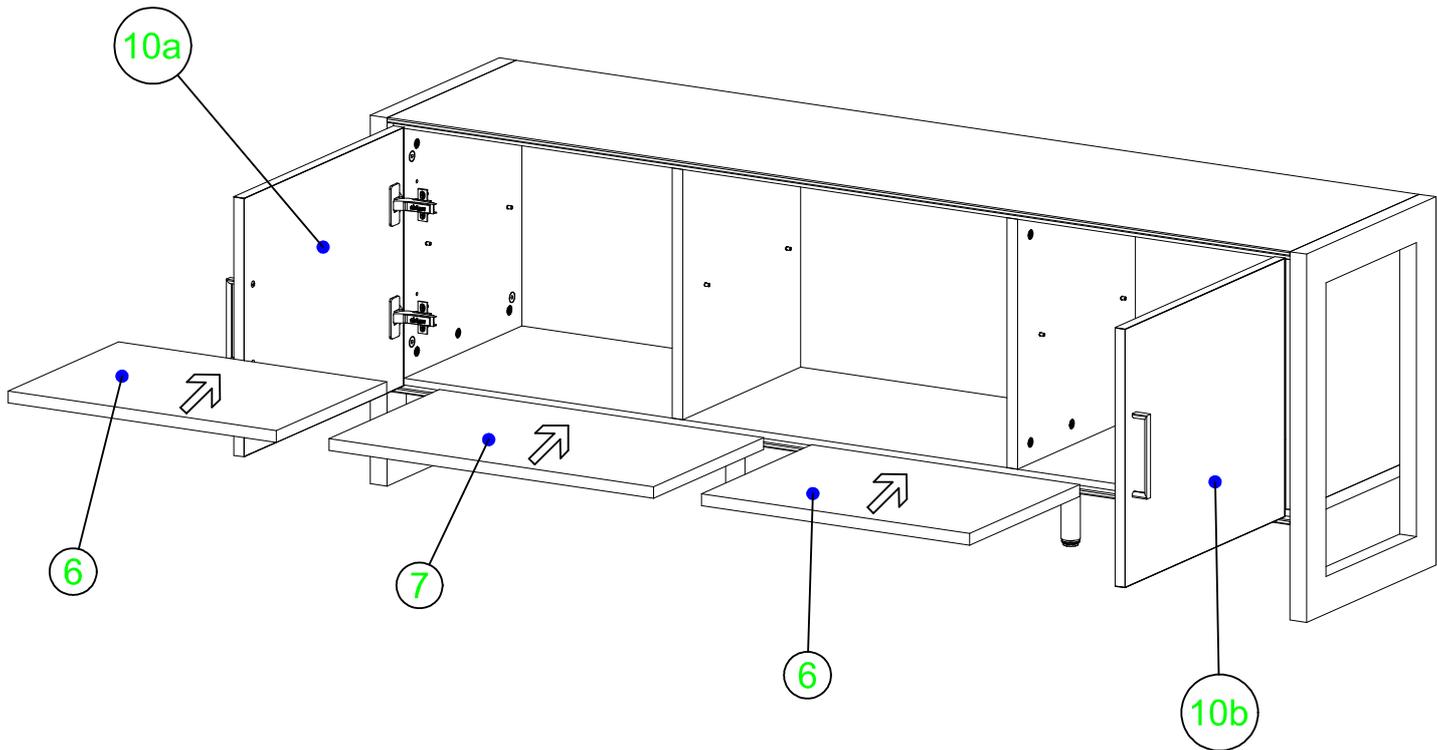

VII

d

