

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromážďovací instrukce

I Istruzioni per il montaggio



F Instructions de montage

RU Инструкция по монтажу

H Gennyesevés utasítások


Prestige

Polsterbett-Gestoffteerde bed-Tapicerowane łóżko-Tapitate pat-Upholstered bed-Мякая крэват-yataк капітоне-Letto imbottito-Lit rembourré
Čaluněná postele čaluněné postele kárpitovaný ágy

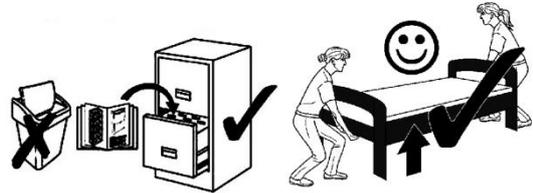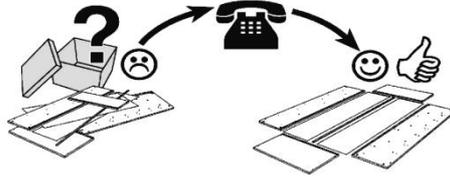


90/120 cm


1x




1x

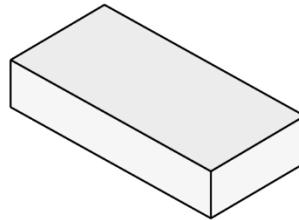

1x

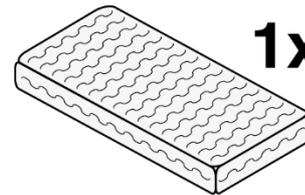

4x




4x




Schrauben in der Kopfteilverpackung enthalten

140 cm


1x

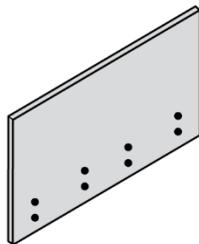


2x

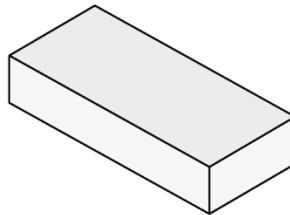

1x

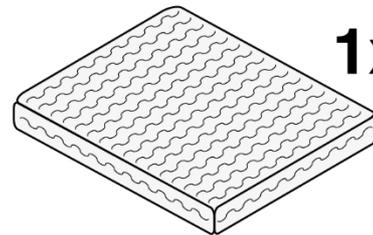

8x




8x




Schrauben in der Kopfteilverpackung enthalten

160/180 cm


1x

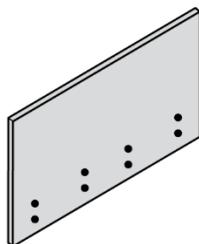


2x

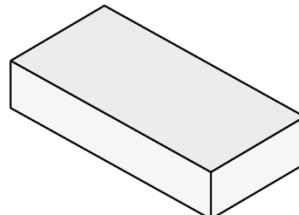


2x

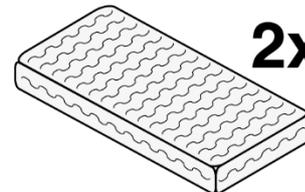

8x




8x





Schrauben in der Kopfteilverpackung enthalten

Aufbau 1 Box

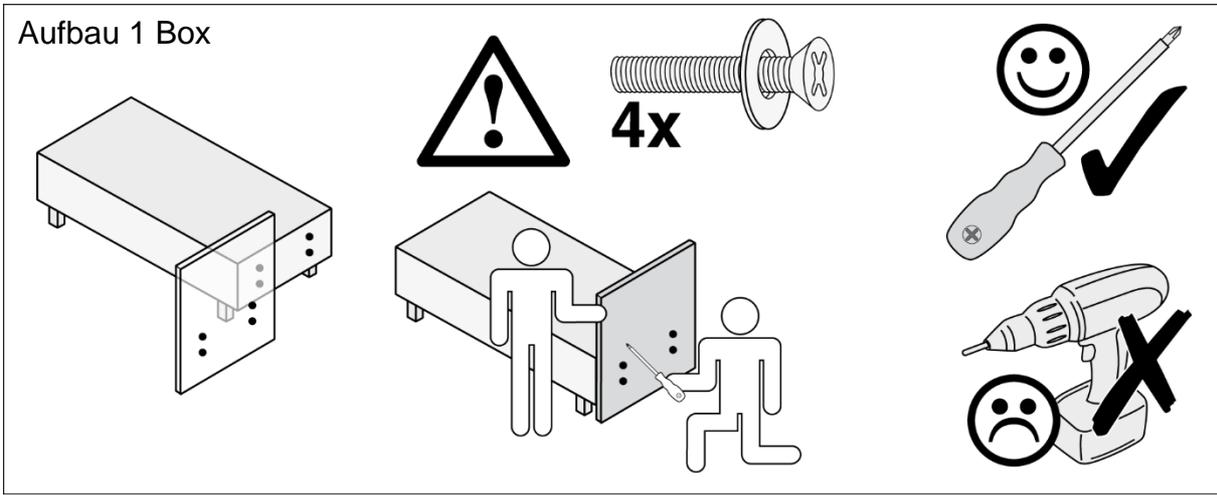

Aufbau 2 Boxen

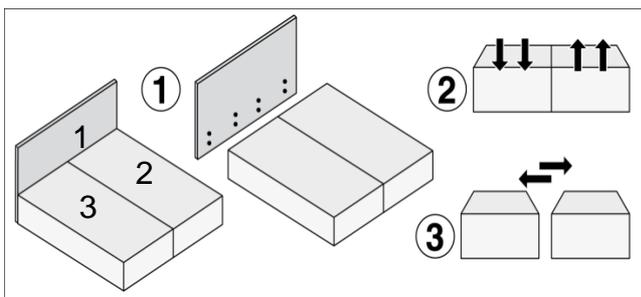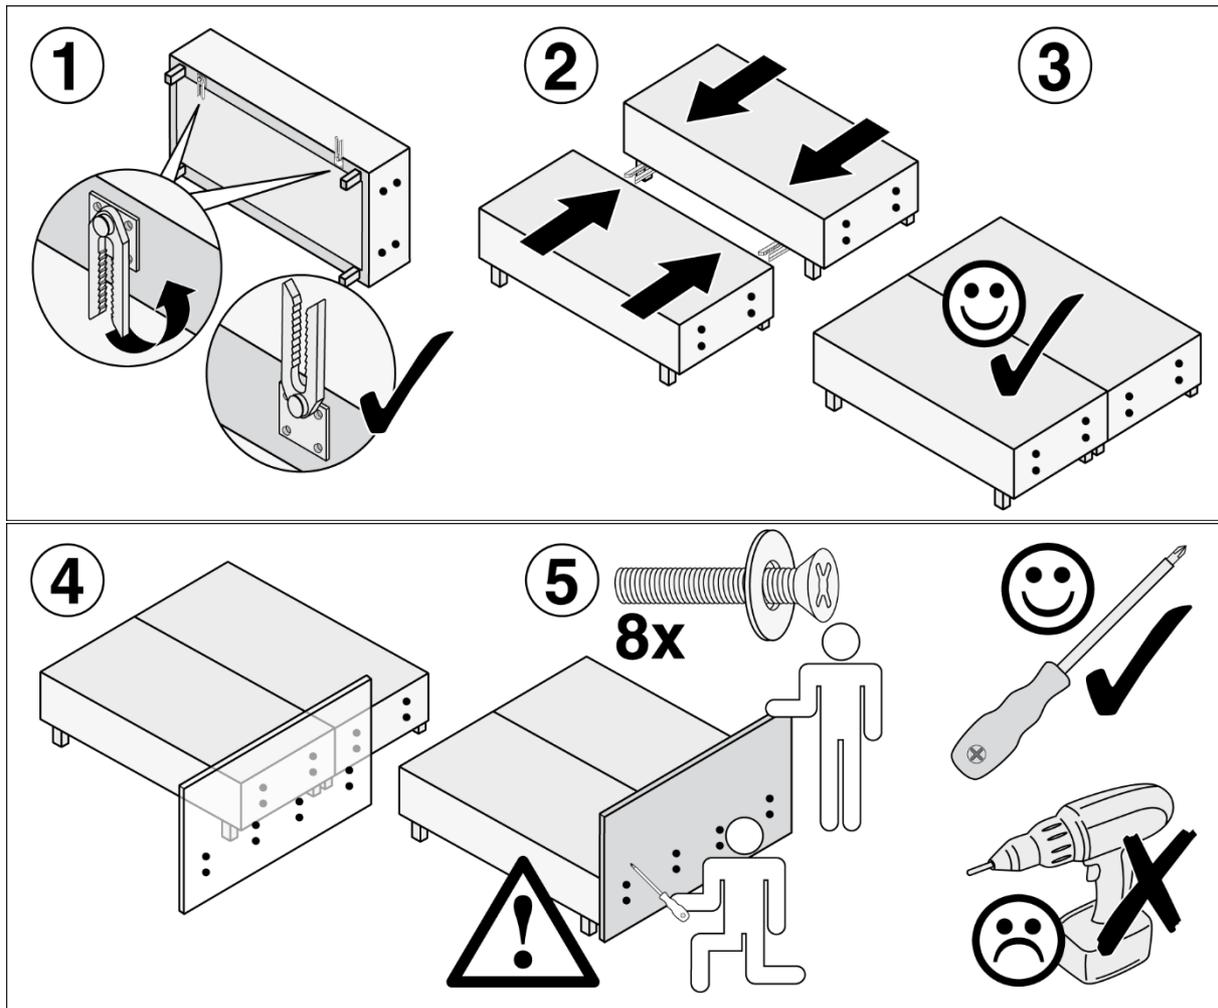

WESTFALIA[®]
Schlafkomfort

Made in Germany

Elastoflex GmbH
Löhner Str. 123
32584 Löhne / Germany
info@elastoflex-betten.de